

DIRECTIONS FOR OPERATING THE MASTER HIGH FREQUENCY OUTFIT

DO'S

1. Insert glass applicator into the instrument with a slightly turning movement. Hold by stem. Do not insert by grasping bulb end or metal tip of electrode or put pressure on electrode.
2. Place the connecting plug into a properly rated electrical outlet.
3. Adjustment of the High Frequency discharge is obtained by adjusting knob.
4. Place glass applicator lightly on the skin surface and slowly move the applicator back and forth across the surface of the skin.
5. Start any operation with a mild discharge and increase it gradually until the desired sensation is obtained.
6. Take good care of the connecting cord. Keep it dry and free from knots and twists. Have it repaired in time if signs of wear appear.

DON'T'S

7. Duration of usage should not exceed five minutes for one individual.
8. The machine should not be applied more often than four times during any one twenty-four hour period, with at least one hour interval between each application.
9. Do not attempt to repair the apparatus. If the necessity arises, write to the factory advising of your difficulties and you will be informed what to do.
10. Do not use the Master in connection with any tonic, water, inflammable lotions, or medicament containing alcohol—on the hair or any part of the body.
11. Be careful with the apparatus and when not in use, turn the current off and remove the connecting plug from the electrical outlet.
12. Do not touch the appliance or attempt to connect it to an electrical outlet when your hands are wet. Do not use while at the wash basin or in the bath tub or shower.
13. Do not operate your machine at any one time longer than five minutes except for 7B which may be operated for as long as 1/2 hour. Beyond the recommended periods overheats the coils and may result in their burning out. When this occurs, our guarantee does not apply. The machine may be used intermittently over a long period of time providing the coils are permitted to cool between use.
14. Do not allow the body to come in contact with metal, this includes metal furniture, while using or operating this device.
15. An extremely important DON'T is that the handle of the High Frequency Outfit should NOT be grasped close to the applicator while the machine is plugged into the electrical outlet.

The reason for this is that the current will jump from the tip of the handle if it is not being drawn off by the glass applicator to some part of the body. It is a simple matter to avoid by merely holding the handle of your machine at the farthest end away from the electrode.

When using the apparatus, always grasp it above the round ridge on the housing.

16. Occasionally, we have complaints when the one-piece outfits do not operate while held in a vertical position. When this occurs, use a stronger current or reverse the position of the outfit. It is never necessary to use the Outfit in an upside position.
17. Damages arising from carelessness are not covered by our guarantee. If instructions are properly followed, the Master will last indefinitely.
18. At times an outfit in good working order is returned to us for attention. Try plugging into another electrical outlet for checking purposes.
19. Master High Frequency seldom gives the user trouble and will last indefinitely. Nothing is to be oiled or adjusted. When trouble occurs, it is usually with the electrode, as already explained, or due to a broken cord at the point where it enters the cap in the base of the Bakelite handle.
20. If the outfit fails to operate, try turning the knob clockwise and be certain you have electrical contact.